

BRAUN

CareStyle Compact



Type 1281000

Register your product
www.braunhousehold.com/register

CareStyle Compact IS 2043 BL
CareStyle Compact IS 2044 VI
智能温控蒸汽熨斗






English 5






中文 10

© Copyright 2019. All rights reserved
De'Longhi Braun Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany

5712812211/1.19 – IS 2043, IS 2044
UK/CN



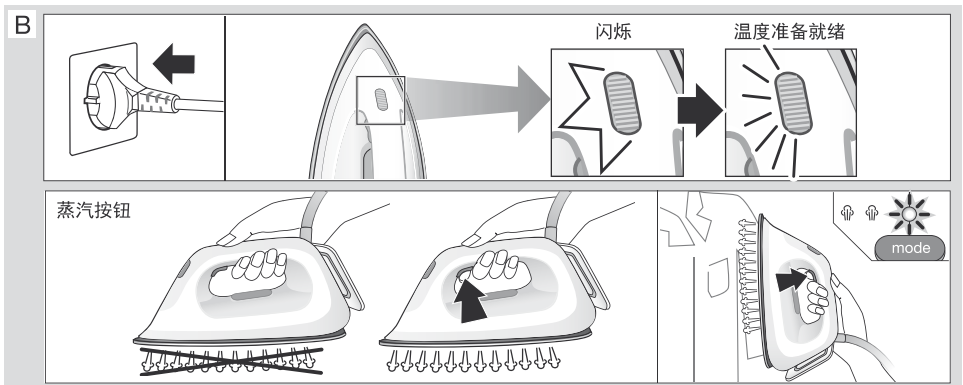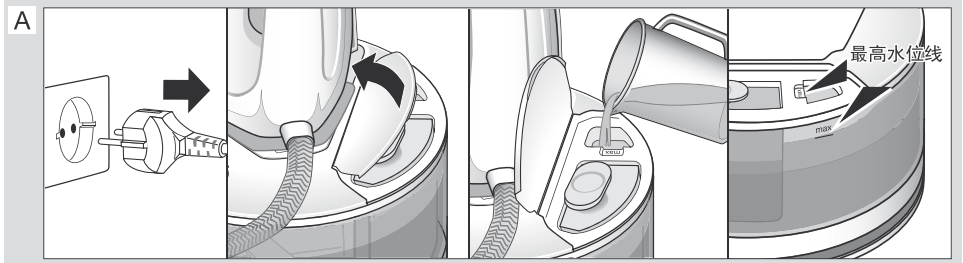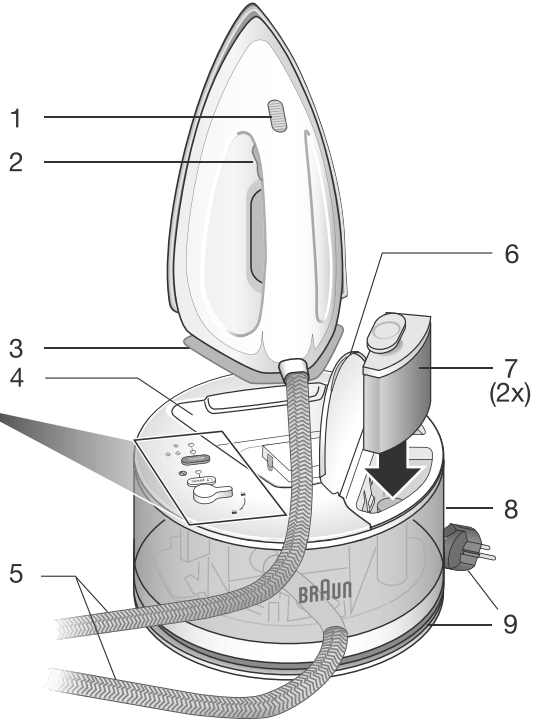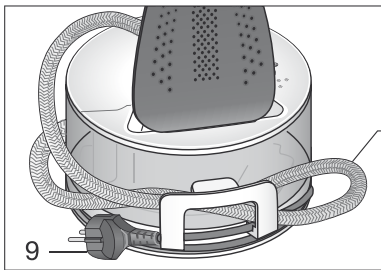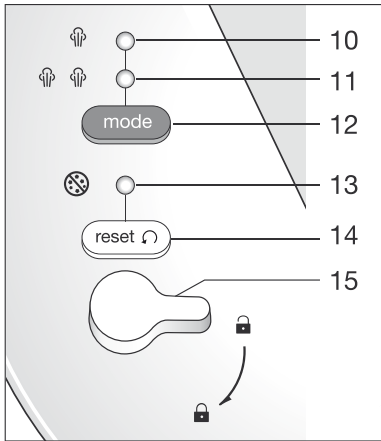

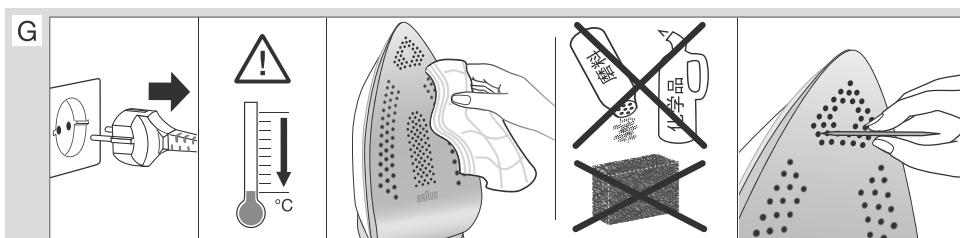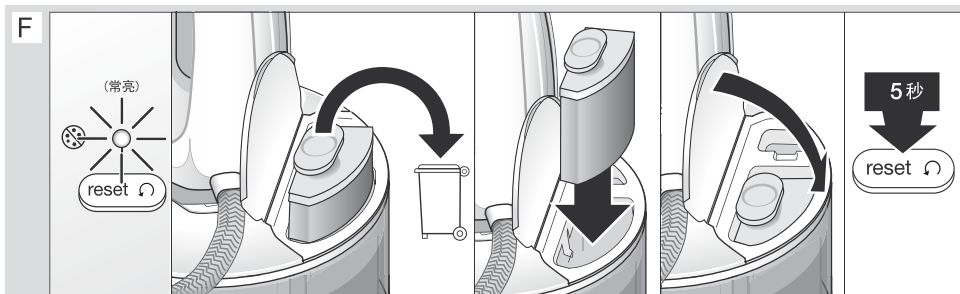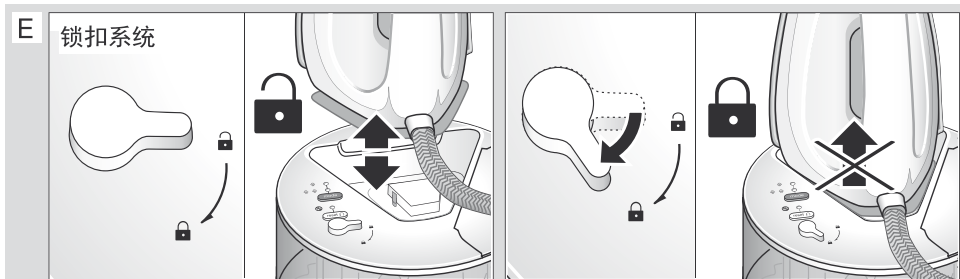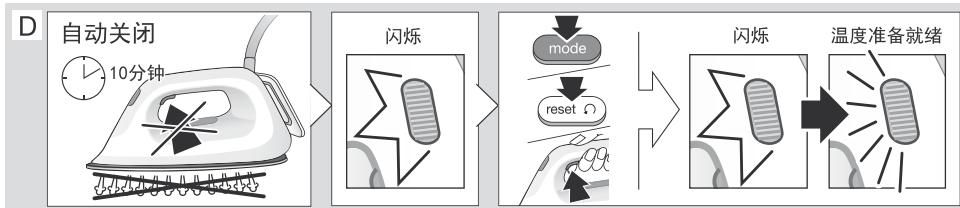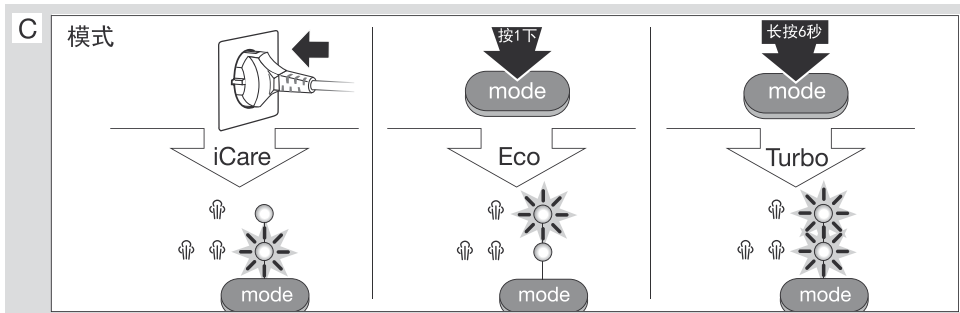

English

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you thoroughly enjoy the new Braun appliance.

Before use

Please read instructions carefully and completely before using the appliance.

Caution



- **Caution: Hot surfaces!** Electric ironing stations combine high temperatures and hot steam that could lead to burns.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- During operation and cool-down the appliance and its mains cord shall be kept out of reach of children under 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always unplug the station/iron before filling with water.
- The appliance must be used and rested on a stable surface.
- During ironing pauses, place the iron upright on its heel rest or on the iron rest. Ensure that the heel rest is placed on a stable surface.

- The iron must not be left unattended while it is connected to the supply mains.
- The appliance must not to be used if it has dropped, if there are visible signs of damage or if it is leaking. Regularly check the cords for damages.
- Never immerse the unit in water or other liquids.
- This appliance is designed for household use only and for processing normal household quantities.
- Please clean all parts before first use or as required, following the instructions in the Care and Cleaning section.
- The cords should never come in contact with hot objects, the soleplate, water and sharp edges.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance and that you are using an earthed socket.
- When using an extension cord watch out that it is in good condition, has a plug with an earth connection and corresponds with the power rating of the appliance (16A).
- The soleplate and the iron rest can reach very high temperatures that could lead to burns. Do not touch them.
- Choking hazard. The appliance might contain small parts. Some of those small parts might be required to get disassembled during cleaning and maintenance operations. Handle with care and keep small parts out of reach of children.
- **Important:**
Keep all packaging (plastic bags, polystyrene foam) away from children.

- **Caution:** Due to the high power of this steam iron please make sure that your mains supply is sufficient. Please contact your local electric power company to make sure that the so called mains impedance is not higher than 0.372 Ohm.

Description

Iron

- 1 Temperature control LED
- 2 Steam button
- 3 Heel rest

Base unit

- 4 Iron rest
- 5 Double cord / double cord storage
- 6 Water tank lid
- 7 Anti-limescale filter cartridges
- 8 Water tank
- 9 Power cord / power cord storage
- 10 Eco mode indicator
- 11 iCare mode indicator
- 12 Mode button
- 13 Anti-limescale indicator
- 14 Reset button
- 15 Locking knob

Intended use

The appliance must be used only for ironing garments which are suitable for ironing according to the care label. Never iron or dampen garments while wearing them.

Unpacking

Take the unit out of the carton. Remove all pieces of the packing. Remove any possibly extant labels on the unit (do not remove the rating plate).

Insert anti-limescale filter cartridge

- Remove the anti-limescale filter cartridge (7) from the polybag and follow the instructions given on the pack.
- Open the water tank lid (6).
- Insert the anti-limescale filter cartridge into position until it locks into place.
- Close the water tank lid.

Note: If no anti-limescale filter cartridge is installed, or the anti-limescale filter cartridge is not installed correctly, the appliance will not work correctly.

(A) Filling the water tank


- Make sure that the iron is unplugged.
- Open the tank lid (6) and fill the water tank with tap water, taking care not to exceed the «max» level. If you have extremely hard water, we recommend that you use a mixture of 50 % tap water and 50 % demineralised water. Do not add any additives (e.g. perfumes and other chemical materials). Do not use condensation water from a tumble dryer.
- Place the appliance on a stable, level surface.

Before first use

When you use the appliance for the first time, press the steam button (2) for about 60 seconds and hold the iron horizontally to pull the steam through to the soleplate.

When steam is ready for the first time we recommend to iron for a few minutes over a rag to avoid manufacturing residues can dirty your garments.

(B) Start into operation

Before start ironing follow the garment care label instructions carefully. Fabrics with this symbol  are not ironable.

- Place the iron on the iron rest (4), unwind completely the power cord and plug in.
- The iron will start to heat up and the temperature control LED (1) on the iron will flash. Once the iron is ready the temperature control LED is permanently on.
- For ironing with steam, press the steam button (2) below the iron handle. Steam will come out from the holes in the soleplate.
- For dry ironing, iron without pressing the steam button. Please note that after 10 minutes of dry ironing, the iron switches to the auto-off mode.

For best results

- Always iron black and dark garments inside out to avoid getting a sheen on the fabrics from the iron.
- When ironing a shirt, start with the more difficult parts like collar, cuff links and sleeves. Then iron the bigger parts like front and back, so you can prevent wrinkling the bigger parts when you are ironing the other parts.
- When you iron a collar, start on its underside and work from the outside (the pointy end) inwards. Turn over and repeat. Fold down the collar and press the edge for a more crisp finish.
- When ironing garments with imprints, applications or even more sensitive fabric parts

(i.e. embroidery), turn them inside out and, if necessary, lay a cotton cloth between the iron and the fabric. This way you avoid damage and get the volume of fabric designs that are not to be ironed flat.

- In order to prevent new creases while ironing with steam make sure that the garment shows no residual moisture before going on ironing other parts of it.

(C) Settings

iCare

The iCare mode is automatically chosen when the appliance is plugged in. The iCare mode indicator (11) is on.

This mode is suggested for garments like wool, polyester and cotton/linen.

eco

The eco mode is suggested for most delicate garments like synthetics, silk and blended fabrics for which you need less steam. This mode allows less power consumption.

To select the eco mode, press the mode button (12). The eco mode indicator (10) turns on.



turbo

The turbo mode is suggested for garments that need more powerful steam, like thick cotton/linen and jeans.

To select the turbo mode, hold down the mode button (12) until the eco mode indicator (10) and the iCare mode indicator (11) turn on.

Double trigger (turbo mode only)

Use the double trigger function to remove stubborn creases.

Press the steam button (2) twice quickly. There will be a continuous steam emission for a few seconds. Press the steam button once again during steam emission to stop the function.

To repeat the steam boost wait about 12 seconds before pressing again the steam button.

Vertical steam (iCare mode only)

The iron can also be used for steaming hanging clothes for a quick refreshment. However, this function does not replace ironing.

Ensure the iCare mode is selected and hold the iron in a vertical position, tilted slightly forwards.

Press repeatedly the steam button (2) while moving the iron from top to the bottom. Then place the iron on the iron rest.

Steam is very hot: never iron or dampen garment while wearing them.

3D soleplate

The unique round shape of the 3D soleplate ensures best gliding results on difficult parts (e. g. buttons, pockets etc.)

(D) Auto-off



This function is activated if after 10 minutes there has been no steam emission.

- When the appliance is in the auto-off mode the temperature control LED (1) is flashing in a faster interval.
- To turn the iron on again press the reset button (14), the mode button (12) or the steam button (2).
- Before start ironing again wait until the temperature control LED is permanently on.

(E) Lock system / storage

The appliance is equipped with a lock system for convenient transportation and easy storage. It is possible to lift and carry the appliance on the handle of the locked iron.

NOTE: Before transportation make sure the iron is properly locked and has cooled down completely. In case you do not use the appliance for a longer time (more than 1 month), empty the water tank before storage.

- Place the iron on its heel rest (3) into the iron rest (4) on the base unit.
- To lock the iron turn the locking knob (15) to .
- To unlock the iron turn the locking knob to . The iron will be released.

Unplug and let the appliance cool down (the soleplate is hot) before winding the cords for storage.

(F) Anti-limescale filter cartridge replacement

To maintain optimum performance of your appliance it is important to exchange regularly the anti-limescale filter cartridge or use demineralised water.

When the anti-limescale filter cartridge requires changing, the anti-limescale indicator (13) turns on.

- a. Unplug the appliance.
- b. Remove the old anti-limescale filter cartridge (7) by lifting it out of the water tank (8) and dispose it.
- c. Follow the instructions given on the foil and insert the new anti-limescale filter cartridge into position until it locks into place.

- d. Close the tank lid, plug in and press the reset button (14) for 5 seconds until the LED turns off.

NOTE: After the replacement of the anti-limescale filter cartridge press the steam button (2) for about 60 seconds and hold the iron horizontally to pull the steam through to the soleplate.

In case of using demineralised water, you need to leave the filter cartridge in the compartment and press the reset button (14) for 5 seconds each time the anti-limescale indicator turns permanently on until the LED turns off.

We recommend using the CareStyle anti-limescale filter cartridge (can be purchased in stores, through www.braunhousehold.com or by calling Customer Service).

Do not use any chemicals, additives or descaler to rinse the water tank.

(G) Care and cleaning

- Before cleaning, always make sure that the appliance is unplugged and has cooled down completely.
- To clean the soleplate it is suggested to use a damp cloth.
- Never use chemicals, vinegar or scouring pads (eg. sponges with coarse nylon fabrics etc).

Please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.



Troubleshooting guide

PROBLEM	CAUSE	REMEDY
The appliance does not produce any steam.	There is not enough water in the water tank.	Unplug the appliance; check if the anti-limescale filter cartridge has been well prepared and is placed properly; fill water up to max. level; close the lid of the water tank; plug in and wait until the temperature control LED is permanently on; press the steam button until steam comes out of the soleplate. In case above procedure does not solve the problem take the following steps: press RESET + steam buttons together until steam comes out. Once steam comes out, release the buttons.
	The steam button has not been pressed.	
	A new anti-limescale filter cartridge has just been installed.	
	The anti-limescale filter cartridge is not placed properly.	
The anti-limescale indicator is on and less or no steam comes out of the iron when pressing the steam button.	The anti-limescale filter cartridge needs to be replaced.	Replace the anti-limescale filter cartridge and press the reset button for 5 seconds until the LED turns off. You can also use demineralised water. In that case, you need to leave the anti-limescale filter cartridge in the compartment and press the reset button for 5 seconds each time the the antilimescale indicator turns on.

The appliance emits a loud noise associated with vibrations (subtle pumping sound is normal).	A new anti-limescale filter cartridge has just been installed.	Continue to press the steam button until the loud noise stops and steam comes out of the soleplate.
	The water tank is empty.	Refill the water tank and press the steam button until the loud noise stops and steam comes out of the soleplate.
	The anti-limescale filter cartridge is not in place.	Place the anti-limescale filter cartridge in the compartment.
	The anti-limescale filter cartridge is damaged or shows cracks.	Inspect the anti-limescale filter cartridge thoroughly. If you see any sign of damage or cracks, replace the anti-limescale filter cartridge with a new one.
The first time the appliance is turned on, you notice smoke / smell.	Some parts have been treated with sealer/lubricant which evaporates the first time the iron heats up.	This is normal and will stop when you have used the iron a few times. If the smoke/smell is still present after turning off the appliance, contact an authorised Braun Customer Service.
There is too much steam coming out of the iron.	Mode turbo is on.	Activate the iCare or eco mode by pressing the mode button.
Water (dirty) droplets and impurities come out of the soleplate.	After the anti-limescale filter cartridge replacement, remaining water may drip out of the soleplate.	Take the iron out of the base and position it horizontally on a thick towel or cloth. Press the steam button and the reset button at the same time until the Temperature Control LED on the iron starts flashing. Release the 2 buttons and wipe the soleplate dry with a cloth. Watch out – the soleplate is hot.
All LEDs are flashing.	System error.	Unplug the system, plug in again. If the problem is still present turn the appliance off immediately and contact an authorised Braun Customer Service.


中文

我们的产品经过精心设计，功能完备，质量优异，满足高标准要求。
希望您喜欢这款全新的博朗产品。

使用前须知

使用产品前，请仔细阅读使用说明书。

注意事项

-  注意：产品表面温度很高！蒸汽熨斗会产生较高温度及大量蒸汽，请务必小心，谨防烫伤。
- 大于8岁的儿童或有生理、心理和感官障碍或缺乏本产品操作经验及知识的人士请在有人监管或指导的情况下安全使用本产品，并确保已了解相关操作风险。
- 请勿让儿童把玩本产品。
- 请勿让儿童在无人监管的情况下清洁、维护本产品。
- 在使用和冷却本机过程中，本产品及其主电源线应置于8岁以下儿童接触不到的地方。
- 电源线损坏时，为了避免危险，请务必由制造商、服务代理商或经授权的专业服务人员更换。
- 在给水箱注水前，必须将本产品的电源线插头从插座上拔掉。
- 使用熨斗期间，请勿打开注水口。
- 本产品必须在稳定的表面上使用和搁置。
- 当把电熨斗放置在其底座上时，应确保底座已放在稳定的表面上。
- 在熨斗接通电源期间，使用者不得离开。
- 如果本产品不慎掉落、出现明显的损坏痕迹或出现漏水现象时，切勿继续使用。请定期检查电源线是否有损坏。
- 切勿将熨斗或熨斗底座浸泡在水或其他液体中。
- 本产品仅限于家用，适合熨烫普通家庭量的衣物。
- 初次使用前请清洗所有部件，或按需要清洗。具体清洗方法参照《维护和清洗》部分。
- 电源线不得与高温物体、熨斗底板、水或锐利边缘接触。

- 产品通电之前，请先确认当地供电电压与本产品底部标签所示的额定电压是否一致，并确认是否使用的是接地插座。
- 使用拖线板时，请确保延长电线无任何破损，并使用带接地线且最小额定电流为10A的插座。
- 熨斗底板和底座可能达到很高的温度，从而导致烫伤。请勿触碰。
- 窒息危险。本产品可能含有较小的零部件。清洗和维护期间可能需要拆卸其中的一些小零件。请小心装卸，把小零件置于儿童够不到的地方。
- 重要：**
请将所有包装材料(塑料袋、泡沫塑料)置于儿童接触不到的位置。
- 注意：**由于此款蒸汽熨斗功率很大，请在使用过程中确保电源充足。

产品描述

熨斗

- 温控灯
- 蒸汽按钮
- 熨斗搁架

底座

- 隔热底座
- 双芯软管线/双芯软管线储藏格
- 水箱盖
- 防水垢过滤器滤芯
- 水箱
- 电源线/电源线储藏格
- Eco节能模式指示灯
- iCare恒温模式指示灯
- 模式选择按钮
- 除水垢指示灯
- 重置按钮
- 安全锁扣

产品用途

本产品只适用于熨烫衣物护理标签上标明适合熨烫的衣物。切勿在衣服穿着在身的時候进行熨烫或加湿。

开箱

将本产品从纸箱内取出。取出所有多余的包装材料。

插入防水垢过滤器滤芯

- 去除防水垢过滤器滤芯（7）外的塑料包装袋，按照包装上的图示说明或以下步骤进行安装（注意：此滤芯不得用于其它用途）。
- 将防水垢过滤器滤芯（7）完全浸泡在水中或用水冲洗约1分钟。
- 拔掉插头。
- 打开水箱盖（6）。
- 将防水垢过滤器滤芯插入相应位置直至其固定。
- 关闭水箱盖。
- 按压reset 重置按钮（14）5秒。

注意：如果未安装防水垢过滤器滤芯，或未正确安装防水垢过滤器滤芯，本机器将不能正常运行。

(A) 往水箱注水

- 请确保本产品未接通电源。
- 打开水箱盖（6），往水箱注入自来水时，请注意不要超过最高水位线“max”标记处。如果您所在的区域水质非常硬，我们建议您混合50%的自来水和50%的蒸馏水来使用。切勿使用任何添加剂（例如芳香剂和其它化学物质）。切勿使用从滚筒干衣机里回收的冷凝水。
- 将本产品放置在稳定、平坦的表面上使用。


首次使用前

初次使用本产品前，请先接通电源，待温控灯（1）由闪烁变为常亮时，再按压蒸汽按钮（2）约60秒，并且水平握住熨斗使蒸汽输送至熨斗底板。

首次蒸汽准备就绪时，建议先在其它布料上熨烫几分钟，以免因产品在生产中可能留下的残留物而弄脏您的衣物。

(B) 开始熨烫

开始熨烫之前，请仔细参照衣物护理标签

上的说明操作。带有该符号  的织物不可熨烫。

- 将熨斗置于隔热底座（4）上，完全解开电源线，接通电源。
- 熨斗开始加热，在此期间，熨斗上的温控灯（1）开始闪烁。一旦达到所需温度，温控灯（1）常亮。
- 使用蒸汽熨烫功能时，请按压熨斗把手下面的蒸汽按钮（2）。蒸汽将从熨斗底板上的蒸汽孔中喷射出来。注意：释放蒸汽按钮后，可能会有少量残留蒸汽喷出（属正常现象），请勿触碰，谨防烫伤。
- 使用干烫功能时，无需按蒸汽按钮（2）。请注意，干烫10分钟后，本机会切换至自动关闭模式。

为获得最佳效果

- 熨烫黑色和深色衣物时，务必将其里面翻到外面进行熨烫，以免熨斗将织物表面烫出一层光泽。
- 熨烫衬衫时，请先熨烫衣领、袖口和袖子等较难熨烫部位。然后再熨烫前面和后面等大面积部位，这样就可以防止在熨烫其他部位时弄皱大面积部位。
- 熨烫衣领时，请先熨烫反面，并由外部（领尖）向内熨烫。翻过来，重复。随后折叠衣领，并按压边缘熨烫，使其更挺括。
- 熨烫带有印花、立体剪裁设计（如刺绣）的衣物时，将其里面翻到外面进行熨烫，如有必要，在熨斗和织物之间铺一块棉布。这样可以避免织物损伤，并保证有设计感的面料不会被熨平。
- 为了防止在使用蒸汽熨烫期间产生新的折痕，请确保熨好的部位没有多余水汽，随后再熨烫其他部位。

(C) 模式设置

iCare恒温模式

首次插上插座启动本产品时，将自动选择iCare恒温模式。iCare模式指示灯（11）常亮。

对于羊毛、聚酯纤维和棉服/亚麻制品等衣物，建议选择iCare恒温模式。

eco节能模式

对于仅需少量蒸汽熨烫的合成面料、丝质和混纺布等精致织物，建议选择eco节能模式。该模式的能耗更低。

按下mode模式按钮（12）选择eco节能模式。eco模式指示灯（10）常亮。



turbo强力模式

如果衣物（如厚棉衣/亚麻衣物和牛仔裤）需要更强劲有力的蒸汽进行熨烫，建议选择turbo强力模式。

长按mode模式按钮（12）直至eco节能模式指示灯（10）和iCare恒温模式指示灯（11）同时常亮，即为turbo强力模式。

双重触发（仅限turbo强力模式）

使用双重触发功能能够处理顽固褶皱。

快速按压蒸汽按钮（2）两次。按压后蒸汽会持续释放几秒钟。再按一次蒸汽按钮（2）即可结束此功能。

如需重复使用蒸汽强喷功能，需要等待大约12秒方可再次按下蒸汽按钮（2）。

垂直蒸汽喷射(仅限iCare恒温模式)

该产品还可用于快速翻新衣物。

先确认已选择iCare恒温模式，手握熨斗，使其保持垂直，稍微向前倾斜。

反复按压蒸汽按钮（2），同时从上至下移动熨斗。然后把熨斗放置在隔热底座（4）上。

蒸汽温度非常高：切勿在衣服穿着在身的時候熨烫或加湿衣服。

3D熨斗底板

特别设计的圆形3D熨斗底板带来顺滑熨烫体验，即便是纽扣、口袋等地方也能一烫而过，轻松省力。

(D) 自动关闭功能

如果10分钟未喷射蒸汽，该功能将会启用。

- 当本产品进入自动关闭模式时，温控灯（1）会以更快的间隔闪烁。
- 如果想重新启动本产品，请按压reset 重置按钮（14）、mode模式按钮（12）或蒸汽按钮（2）。

• 请耐心等待温控灯（1）常亮后，再进行熨烫。

(E) 锁扣系统/储藏格

本产品配备了一个安全锁扣，以便于运输和收纳。锁好本产品后，可拎起熨斗手柄来搬运本产品。

注意：搬运本产品之前，确保本产品已锁定且完全冷却。如果您长期（超过1个月）不使用本产品，请在存放前将水箱里的水排空。

• 把熨斗(连同熨斗搁架(3))放入隔热底座的对应位置中。

• 如需锁定，请将安全锁扣（15）转至 **0**。

• 如需解锁，请将安全锁扣（15）转至 **1**。

即可解锁本产品。

请拔出插头，等待本产品冷却（熨斗底板很烫），卷好电源线后再存放熨斗。

(F) 更换防水垢过滤器滤芯

为了保证本产品的良好性能，请定期更换防水垢过滤器滤芯。

当防水垢指示灯（13）常亮时，表示需要更换防水垢过滤器滤芯。

a. 拔掉插头。

b. 从水箱（8）中取出旧的防水垢过滤器滤芯（7）并妥善处理。

c. 请遵照滤芯包装上的图示说明或参考《插入防水垢过滤器滤芯》部分（第4页）步骤进行操作，将新的防水垢过滤器滤芯插入相应位置直至固定。

d. 关上水箱盖（6），接通电源，按压reset 重置按钮（14）5秒直至指示灯熄灭。

注意：在更换防水垢过滤器滤芯后，待温控灯（1）由闪烁变为常亮时，再按压蒸汽按钮（2）大约60秒，水平握住熨斗使蒸汽输送至熨斗底板。

我们建议使用 CareStyle 防水垢过滤器滤芯（可以拨打客户热线购买）。

切勿使用任何化学剂、添加剂或除垢剂冲洗水箱。


(G) 维护和清洗

- 清洗前，始终确保本产品插头已拔掉，而且本产品已完全冷却。
- 建议使用湿布清洁熨斗底板。
- 切勿使用化学品、醋或百洁布（例如，带有粗尼龙织物的海绵等）。

在产品使用寿命结束时，请勿将产品作为生活垃圾处理。可以在博朗服务中心或您所在国家相应的收集站点进行处理。



故障排除指南

问题	原因	解决方法
本产品不产生蒸汽。	水箱中的水不够。	拔下电源；检查防水垢过滤器滤芯是否准备好并正确安装；注水至最高水位线“max”标记处；关上水箱盖；接通电源，耐心等待直至温控灯常亮；按下蒸汽按钮直至蒸汽从熨斗底板喷出。如果上述方法不能解决问题，请采用以下步骤：同时按下reset  重置按钮和蒸汽按钮直至有蒸汽喷出。一旦有蒸汽喷出，释放按钮。
	没有按下蒸汽按钮。	
	刚更换了新的防水垢过滤器滤芯。	
	防水垢过滤器滤芯安装不正确。	
防水垢指示灯常亮，按下蒸汽按钮时熨斗有少量或无蒸汽喷出。	需要更换防水垢过滤器滤芯。	更换防水垢过滤器滤芯，按压重置按钮5秒直至指示灯熄灭。
本产品发出持续噪音和抖动(轻微的泵噗声是正常的)。	刚更换了新的防水垢过滤器滤芯。	持续按压蒸汽按钮直至噪音停止，蒸汽从熨斗底板喷出。
	水箱缺水。	重新注满水箱，按压蒸汽按钮直至噪音停止，蒸汽从熨斗底板喷出。
	未正确安装防水垢过滤器滤芯。	将防水垢过滤器滤芯正确安装到水箱中。
	防水垢过滤器滤芯受损或出现裂痕。	全面检查防水垢过滤器滤芯。如果您看到任何损坏或裂痕迹象，请更换一个新的防水垢过滤器滤芯。

问题	原因	解决方法
第一次使用本产品时，冒烟或有异味。	首次使用，熨斗升温后，涂层或润滑油会由于略微蒸发而产生冒烟现象。	属正常现象，使用数次后，这种现象会停止。如果关闭本产品后仍然冒烟/有异味，请联系博朗售后服务中心。
熨斗喷出大量蒸汽。	Turbo强力模式启动。	通过按压模式按钮更换iCare恒温或eco节能模式。
熨斗底板上出现(脏)水滴和杂质。	更换防水垢过滤器滤芯后，残留的水可能会从熨斗底板滴出。	请确保电源已接通，待温控灯由闪烁变为常亮时，将烫斗从底座上取出并水平放置于厚毛巾或抹布上。同时按压蒸汽按钮和重置按钮直至温控灯开始闪烁。释放两个按钮并用抹布将熨斗底板擦干。注意—熨斗底板温度很高。
所有的指示灯都在闪烁。	系统错误。	拔掉插头再插上插头。如果仍然闪烁，立即关闭本机并致电博朗售后服务中心。

保修

我们为产品提供为期两年的保修，保修期从购买日开始计算。

在保修期内，对于产品因材料或生产过程引起的各种瑕疵，我们会视情况更换零部件或整个产品。

申请保修必须将本产品 and 能够证明购买日期的证据（购货发票）一起交给授权的博朗维修站，本产品附有一张授权维修站的名单。请确认已将购货发票放置在安全的地方。

上述保修不包括以下内容

- 由于使用不当而造成的而产品损坏（如使用错误的电流、电压，将产品插入不合适的插座，或者认为损坏等）。
- 正常使用引起的产品老化、磨损，对产品的使用功能及价值影响不大。
- 按行业管理定义的易损、易耗件。
- 如果产品经过未经授权的人员的修理，或产品使用了非本公司（博朗）的零部件，

保修期即终止。

- 非家庭使用（如工业、商业用）引起的损坏。
- 在保修期内提供的服务并不影响保修期按时结束，保修期中更换的零部件或整机的保修服务与本产品的保修期同时终止。
- 除非有法律规定，本公司不对其他任何要求负责。同供货商的销售合同中规定的各项权利不受此保修的影响。

如果需要保修或维修，请与当地的维修站，或就近的维修站联系。

客服热线：400 827 1668



名称和产品中有害物质的含量

Name and content of hazardous substances in products

组件名称 Components Name	有害物质 Hazardous substances					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr (VI))	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
	印刷电路板 组装 Printed Circuit Board Assembly	×	○	○	○	○
电机、阀门 Motors, valves	×	○	○	○	○	○
金属零件 Metal parts	×	○	×	○	○	○

本表格依据SJ/T 11364 的规定编制。This table is prepared in accordance with the provisions of SJ/T 11364.

○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

○: The content of such hazardous substance in all homogeneous material of such components is below the limit required by GB/T 26572.

×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。主要是由于受技术发展水平限制，暂时无法实现替代或减量化，正常使用条件下不会对使用者造成任何健康影响。

×: The content of such hazardous substance in a certain homogeneous material of such components is beyond the limit required by GB/T 26572, mainly due to the level of technical development situation, temporarily unable to achieve replacement or reduction. It will not cause any health issue under normal conditions of use.

